

Инструкция



Прогулочная коляска



Contents

Contents

Page 03 Components Page 04

Assembly: Parts & Opening the Frame

Page 05

Assembly: Installing the Rear Wheels

Page 06

Assembly: Installing the Front Wheels & Using the Bumper Bar

Page 07

Assembly: Using the Harness

Page 08

Assembly:

Attaching Seat Unit to Pram

Page 09

Assembly: Converting Carrycot to Operating the Front Wheel Seat Unit & Operating the Brakes

Page 10

Lock & Seat Recline

Page 11

Folding the Frame & Important Safety Information

Page 12

Warnings

Page 13

Warranty Information

IMPORTANT! READ THE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. YOUR CHILDS SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS. WHEN YOU UNPACK THE STROLLER FROM THE CARTON BOX, PLEASE REMOVE ALL PLASTIC BAGS AND SMALL ACCESSORIES AND KEEP THEM AWAY FROM CHILDREN.



- **Folding Button**
- Hood
- Seat Recline
- Seat Unit Toggle
- **Bumper Bar**
- **6** Bumper Bar Release
- 5 Point Safety Harness
- Seat/Carrycot Removal Button

- Convertible Carrycot & Seat Unit
- Shopping Basket
- Built in Suspension
- 12 Foam Filled Wheels
- **13** Brake
- Footmuff*
- Raincover*

* Not Pictured

Assembly



1. Chassis Frame



2. Seat Unit/Carrycot



3. Bumper Bar



4. Front Wheels



5. Rear Wheels



6. Rear Wheel Axle & Break



7. Rear Wheel Hub Caps



8. Rear Wheel Locking Caps



9.Footmuff

Assembly - Opening the Frame



1. Unhook the latch, located on the right hand side of the frame




2. Lift the handlebar in the direction of the arrow until the frame locks into place.

Assembly - Installing the Rear Wheels



1. Insert the axle through each rear wheel, with the axle going through the break cluster on the wheel first.

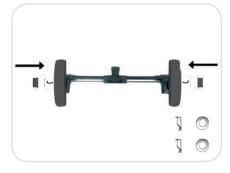

2. Fix the smallest locking cap at the end of the axle to lock the wheel on, then repeat with the hub cap. Repeat this for both wheels, ensuring both sides are securely locked in place.



3. Once the wheels are fixed onto the axle, place the axle onto the frame of the chassis. Push it upwards until you hear a 'click' on both sides



4. To remove the rear wheel axle, push both the metal push pin clips inward, and slide downwards until the axle is clear of the chassis.

Assembly - Using the Bumper Bar



1. Align the bumper bar with the fitting on the frame and push inwards until you hear a 'click' on each side and see the safety release buttons are in the raised position.




2. To remove, press each of the safety release buttons (indicated above) and pull the bumper bar outwards.

Assembly - Installing the Front Wheels





1. Push each front wheel onto the front wheel bayonet until you hear a 'click'. Ensure it is securely attached to the stroller before use.

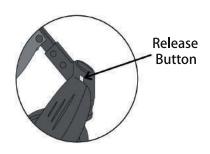

2. To remove the front wheels, locate the release button which can be found at the top of the wheel bayonet, on the inner side. Push the button in firmly and the wheel will disengage.

Assembly - Using the Harness

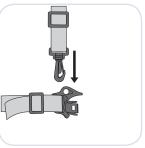

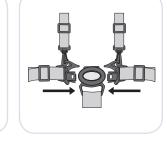



on the side straps

strap fasteners securely straps into the centre press the buckles in the into the loops located clasp until both sides are centre of the harness clicked in securely. Adjust each strap length as required.

1. Insert both shoulder 2. Press the two side 3. To undo the harness, and pull apart.

Assembly - Attaching Seat Unit to Pram



the pram frame



adapters with the cor- downwards until both unit, press the release responding holders on sides 'Click'. Ensure that buttons on both sides the seat is securely fas- of the seat frame and tened before use.



1. Align the seat unit 2. Push the seat unit 3. To remove the seat lift the seat upwards.

Assembly - Converting Carrycot to Seat



carrycot mode, discon- to seat unit, connect the gle located on the nect the two clips locat- two clips located at the top of the carrycot/ ed at the bottom of the bottom of the carrycot/ seat unit. Ensure that seat unit, and loosen the seat unit toggle at the top. Push the fabric downwards from the inside to ensure it lies flat.



1. To use the seat unit in 2. To convert carrycot 3. Tighten the tog-



all fabrics and buckles are secure before use.

Operating the Brakes



1. To engage the brake, apply a light downward pressure to the brake lever. Ensure that the brakes have been applied correctly and that the stroller will not move.



2. To release the breakes, gently lift up the brake lever.



1. Pull the lever located at the rear of the front wheel inwards towards the pram to engage the front wheel lock.



2. To release the lock, pull the lever outwards. Note that each wheel will require the lever to be pulled in a different direction - inwards & outwards, and not left or right.

Operating the Seat Recline




1. To recline the seat, 2. The seat has 3 posi- 3. Please note that the lift the handle located tions - Fully reclined, fully upright position at the top of the seat mid recline and upright. should only be used for a unit.





child over 6 months old.

Folding

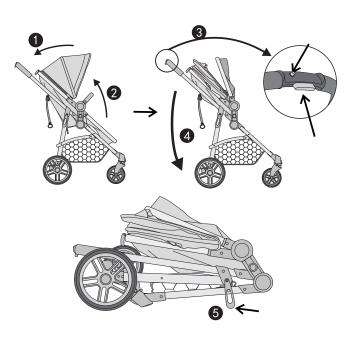

Important Safety Information

CAUTION: Do not load the basket with more than 2 kgs (5LBS)

CLEANING

To clean the fabrics, please refer to the washing label which is located on the rear side of the stroller.

Clean periodically the fabric, plastic and metal parts with a damp cloth. Then dry with a soft and dry cloth to prevent rust from the metal parts.

MAINTENANCE

- Apply dry silicone oil on any moving parts of the stroller when needed.
- Check your stroller regularly. If any parts (like bolts, screws, wheels fabric pieces or stitching) are found to be loose, broken or damaged, always contact your retailer to arrange a repair.
- Where damage or dysfunction occurs, stop using the stroller.
- Strong sun exposure may cause aging and colour fading.
- Check caster bolts and wheel axles periodically and replace any damaged parts immediately.

NOTE: Only use parts and accessories that are recommended by the manufacturer.

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions. When you unpack the stroller from the carton box, please remove all plastic bags and small accessories and keep them away from children .

WARNING This stroller is intended for children from 0 to 36 months and up to 50LBS.

WARNING Ensure that all the locking devices are engaged before use.

WARNING Always use the restraint system.

WARNING To avoid injury or death, always apply the brakes whenever the stroller is stationary.

WARNING Never leave the stroller on a sloping surface with the child in it, even if the brake is activated.

WARNING Use the harness at all times.

WARNING Always use the crotch strap in combination with the waist belts.

WARNING A harness can form loops that may be a strangulation hazard. Never leave harness straps connected when not fitted to a child in the stroller.

WARNING Make sure children are clear of any moving parts if you are folding, unfolding or adjusting the stroller, otherwise they may be injured.

WARNING This stroller is to be used by one child at a time.

WARNING Do not leave your child unattended.

WARNING Do not allow children to stand on the seat or footrest.

WARNING Do not lift and carry the stroller when the child is seating. The stroller may slip or the guardrail may come off.

WARNING Do not allow anyone to adjust the backrest, except the baby's attendant.

WARNING Any load hanging from the handle bar will affect the stability.

WARNING This stroller is not suitable for running or skating.

WARNING Never allow the stroller to be used as a tov.

WARNING Do not overload the basket. Maximum load is 5LBS.

WARNING Regularly inspect the stroller for any parts that are loose, broken, torn or missing.

WARNING Do not put accessories or spare parts that are not supplied by the manufacturer.

WARNING Keep the stroller away from children, when it is not used.

WARNING Be careful when getting on or off a curb or step.

WARNING If the stroller is exposed to the sunlight for many hours, wait until it cools down before putting the child in it. Prolonged exposure to the sun may change the colour of the fabric and materials.

WARNING Never use the stroller on stairs or escalators.

WARNING Never use the stroller near an open fire.